
Touch Screen User Guide



CITY of CALABASAS

CITY OF CALABASAS Founder's Hall

200 Civic Center Way
Calabasas, CA 91302

Need support?

[CREATE A TICKET](#)



CITY *of* CALABASAS

Touch the screen to begin.....


MAIN PAGE



Help – By pressing the Help button you will be diverted to the help screen.

Room Controls – Will provide the room control option.

System Off – Press & Hold for 2 seconds to turn off the system.

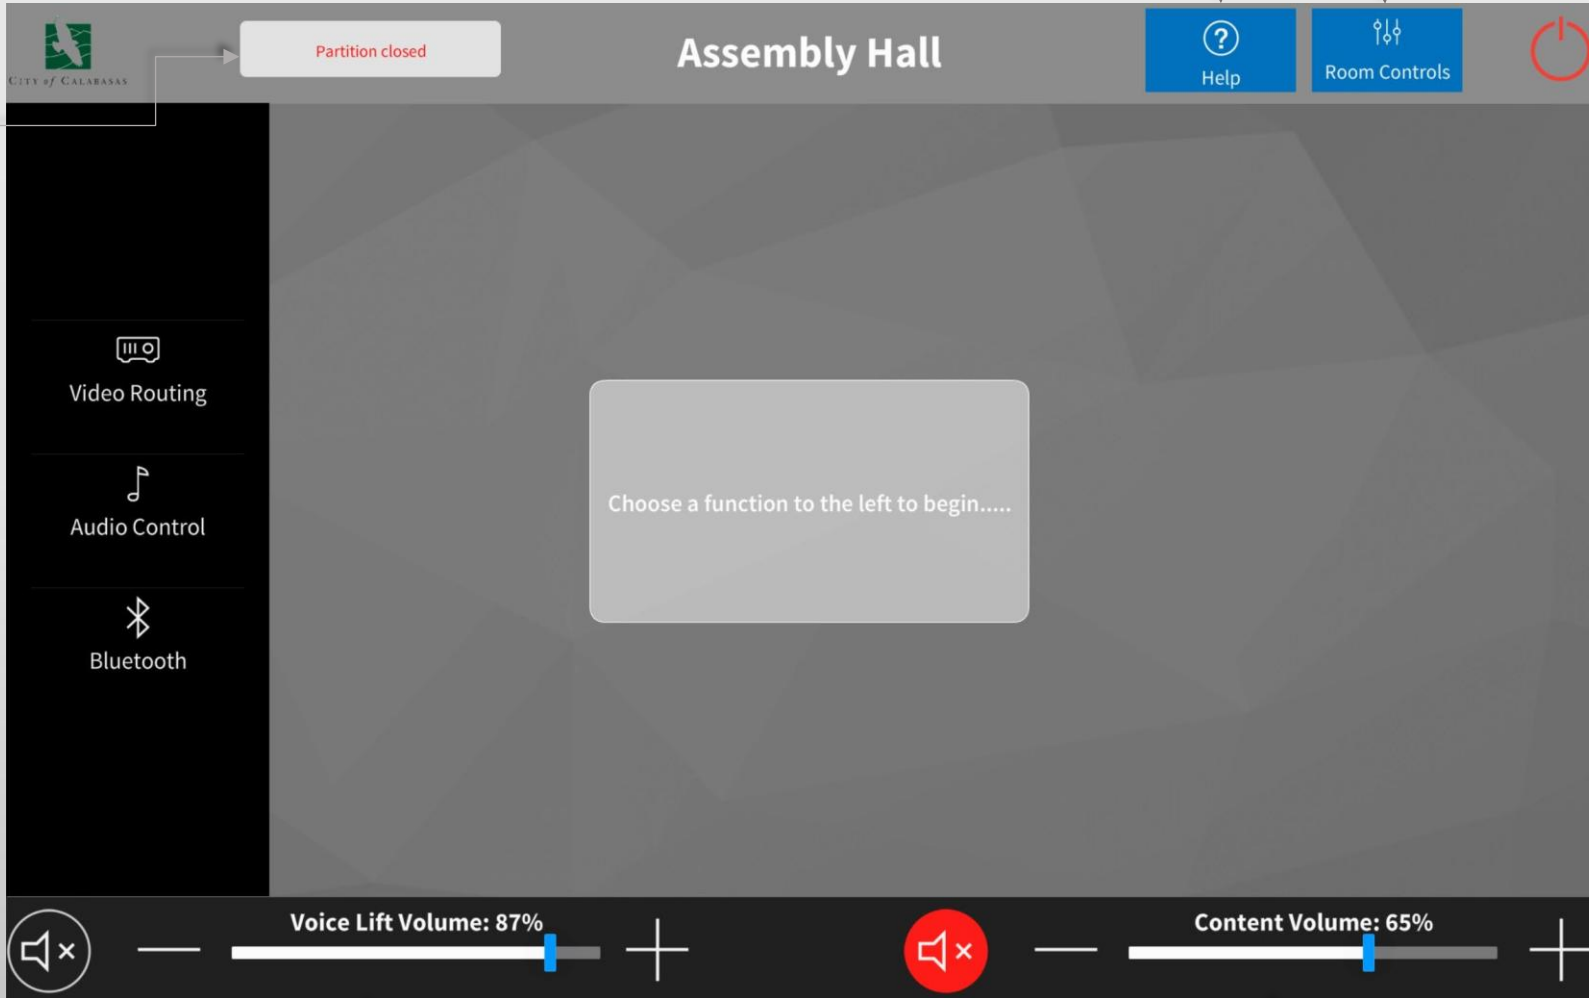

Partition Status – Will provide the status of room divider.

Video – Will provide details about video routing.

Audio – Will provide details about audio system.

Bluetooth – Will provide details about Bluetooth.

Audio Level – Will adjust voice lift & content levels.

Main Page – Follow instructions on the screen.

VIDEO ROUTE



Help – By pressing the Help button you will be diverted to the help screen.


Room Controls – Will provide the room control option.

System Off – Hold for 3 seconds to turn the system.

Source – Select source to route.

Destination – Select destination to present.

Audio Level – Will control the level of voice lift & content.

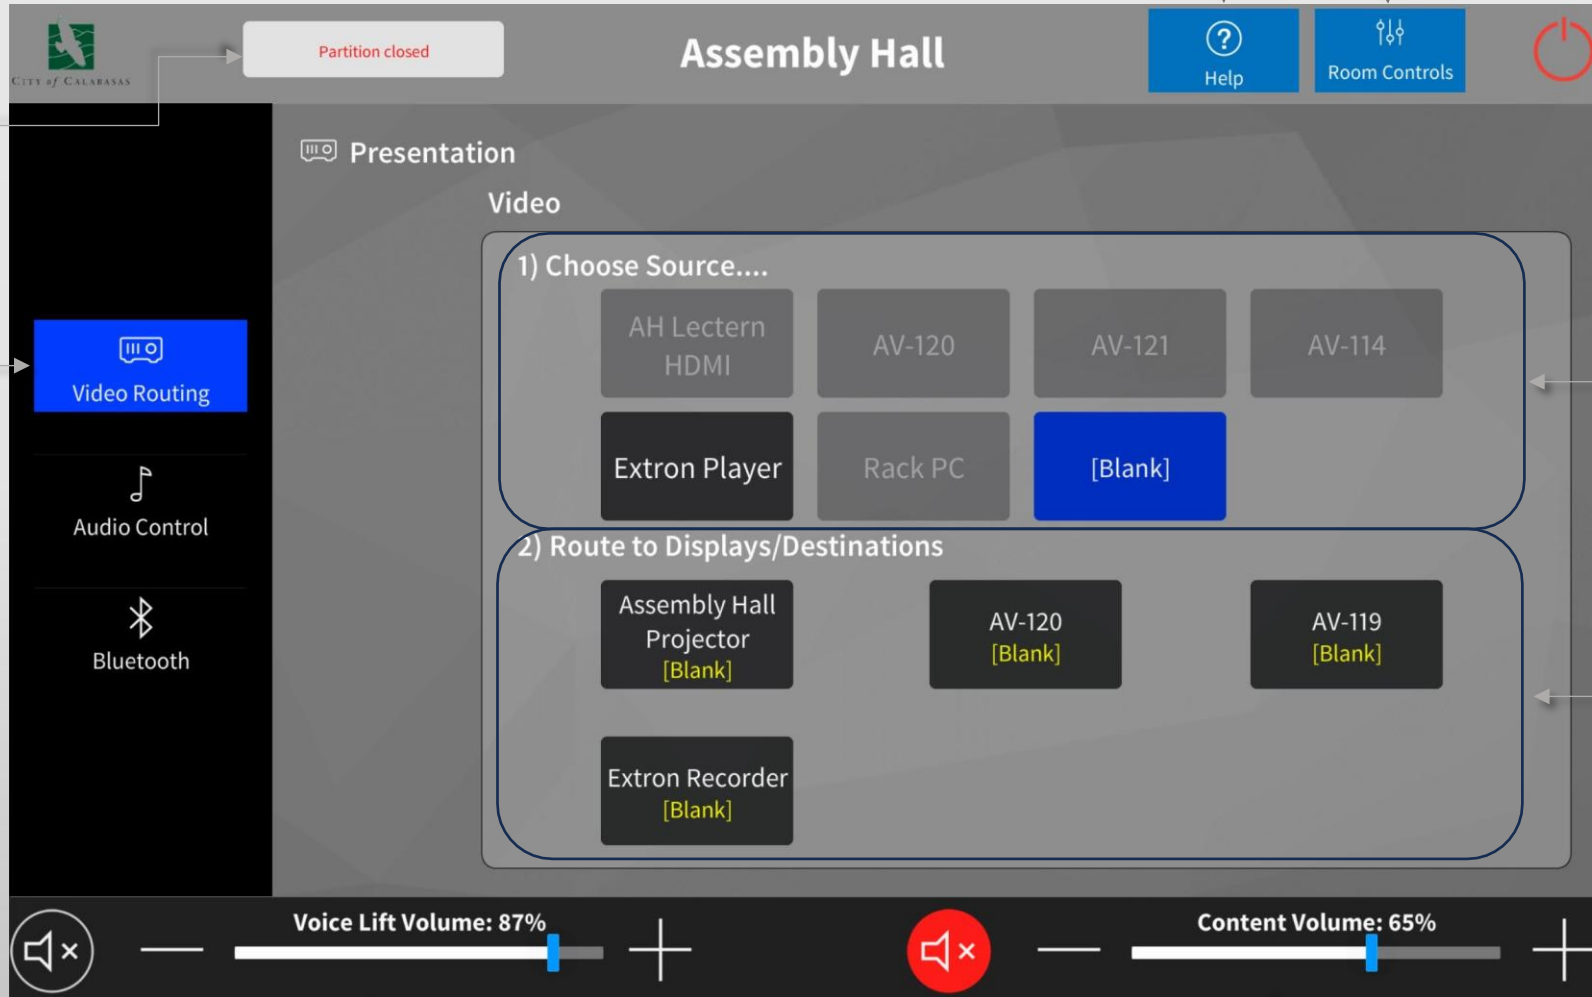

Partition Status – Will provide the status of room divider.

Video – Will provide details about video routing.

Video Routing

Audio Control

Bluetooth

Voice Lift Volume: 87%

Content Volume: 65%

Video Route – Choose source buttons to route the source video to destination. When no source is connected, the icon appears grayed out.

AUDIO CONTROL



Help – By pressing the Help button you will be diverted to the help screen.

Room Controls – Will provide the room control option.

Partition Status – Will provide the status of room divider.

System Off – Hold for 3 seconds to turn the system.

Audio – Will provide details about audio control.

Wireless Microphone – Will provide wireless microphone audio level.

Floorbox/wallplate icon – Will provide displaying a reference photo and providing audio level control.

Audio Level – Will control the level of voice lift & content.

Audio Control – Each icon represents a wall plate or floor box connection, displaying a reference photo and providing audio level control.

AUDIO CONTROL – COMBINE MODE



Help – By pressing the Help button you will be diverted to the help screen.

Room Controls – Will provide the room control option.

Partition Status – Will provide the status of room divider.

Wireless Microphone – Will provide wireless microphone audio level.

Audio – Will provide details about audio control.

Floorbox/Wallplate Icon – Will provide displaying a reference photo and providing audio level control.

The screenshot displays the 'Audio Controls' interface for the 'Assembly Hall'. At the top, there's a 'Partition open' status indicator and a 'Help' button. The main area shows a floor plan with various audio equipment icons: AV Rack, MPR Lectern, FB-102-01, WP-102-01, WP-102-02, FB-101, AH Lectern, FB-101, WP-101-08, FB-101-09, WP-101-02, WP-101-01, and Cabinet. A 'Wireless Microphones' section is also visible. At the bottom, there are volume sliders for 'Voice Lift Volume: 96%' and 'Content Volume: 65%'. A 'Bluetooth' icon is also present.

Audio Level – Will control the level of voice lift & content.

Audio Control – Each icon represents a wall plate or floor box connection, displaying a reference photo and providing audio level control.

AUDIO CONTROL



Help – By pressing the Help button you will be diverted to the help screen.

Room Controls – Will provide the room control option.

Partition Status – Will provide the status of room divider.

Audio – Will provide details about audio control.

The screenshot displays the 'Assembly Hall' audio control interface. At the top, there is a 'Partition open' status indicator, the room name 'Assembly Hall', and buttons for 'Help' and 'Room Controls'. The main control area is divided into several sections: 'XLR Input 1' and 'XLR Input 2' with 90% volume indicators and 'Muted' buttons; 'Line Input' with a 100% volume indicator and 'Mute' button; 'Line Output' with a 100% volume indicator and 'Mute' button; 'Output 1' with an 85% volume indicator and 'Mute' button; and 'Output 2' with a 95% volume indicator and 'Mute' button. A central text box instructs the user to 'Please select any XLR input to turn on and off the Phantom Power (48V)'. To the right, there are preset buttons for 'Line Normal', 'Mic Med +12db', 'Mic Med +42db', and 'Mic High +59db', along with a 'Phantom On/Off' button marked with a red asterisk. A blue 'X' button is also present. At the bottom, there are two volume sliders: 'Voice Lift Volume: 96%' and 'Content Volume: 65%'. On the left side of the interface, there are icons for 'Video Routing', 'Audio Control' (highlighted in blue), and 'Bluetooth'.

Audio Detail – Will provide audio input & output level, mute/unmute, preset audio level, and phantom power On/Off. Select XLR input then press phantom power On/Off to turn on the phantom power.

***Select only for condenser microphones.**

Audio Level – Will control the level of voice lift & content.

Audio Control Icon – Each icon represents a wall plate or floor box connection, displaying a reference photo and providing audio level control.

BLUETOOTH



Help – By pressing the Help button you will be diverted to the help screen.


Room Controls – Will provide the room control option.

Partition Status – Will provide the status of room divider.

Bluetooth – Will provide details about Bluetooth.

Bluetooth – Enables Bluetooth discoverability. Bluetooth is disabled by default for privacy. To pair a device, use the pairing code displayed on the Bluetooth interface. Each room operates with an independent Bluetooth connection.

Audio Level – Will control the level of voice lift & content.

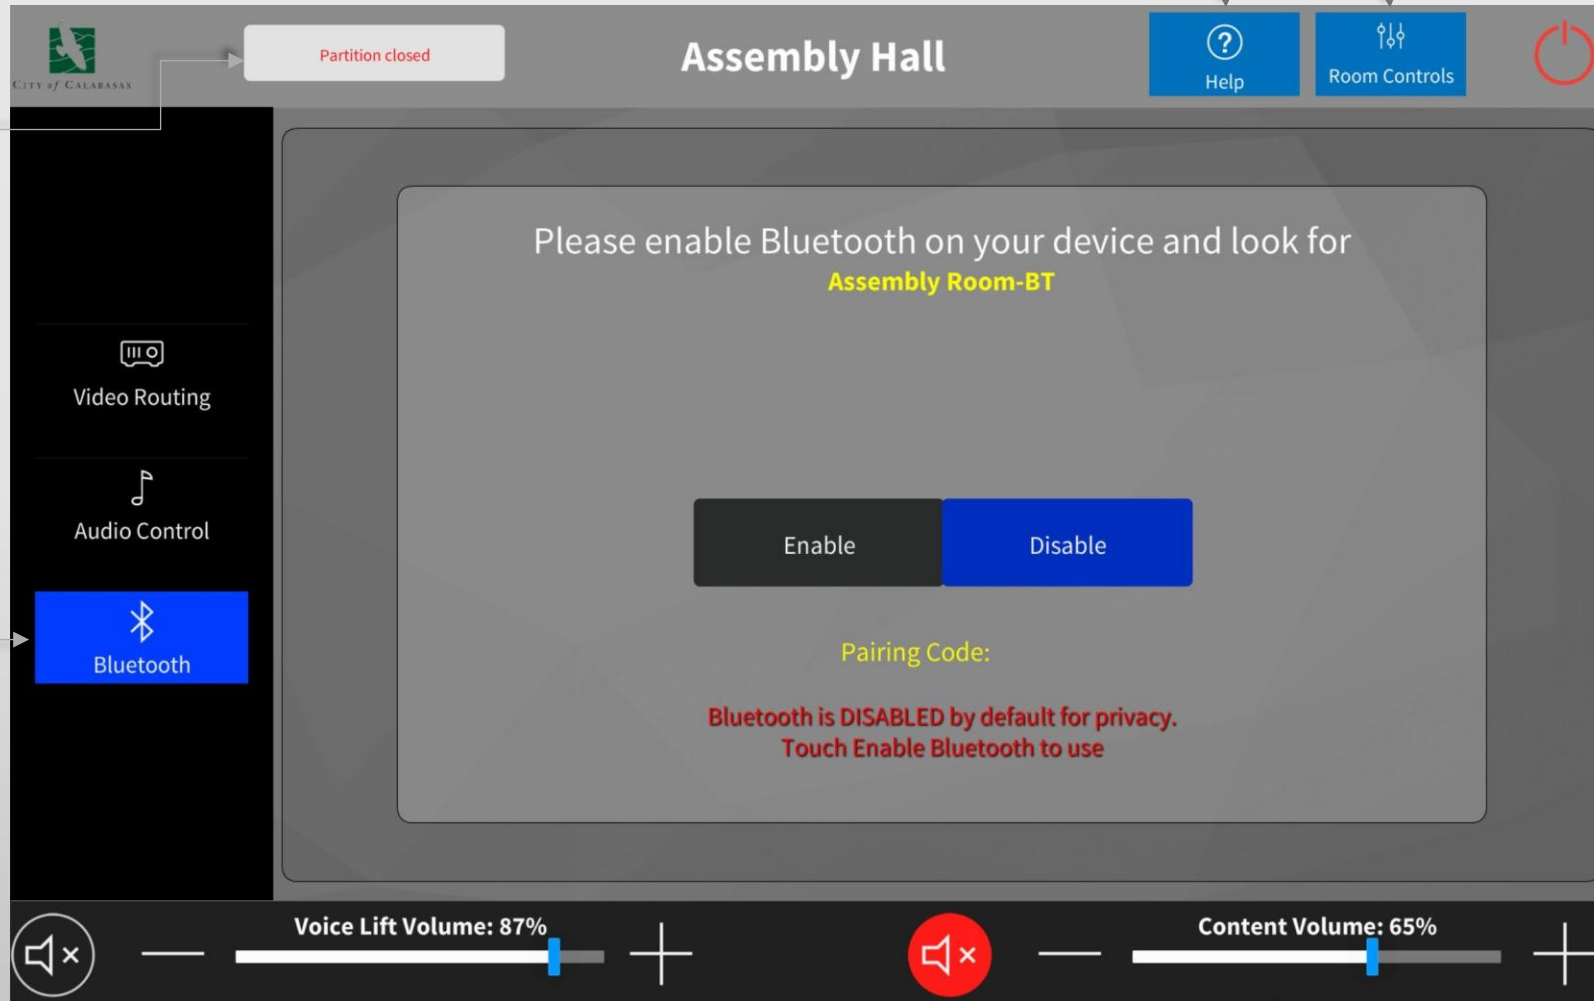


Bluetooth – Bluetooth is Disabled by default for privacy.

ROOM CONTROL



Help – By pressing the Help button you will be diverted to the help screen.

Room Controls – Will provide the room control option.

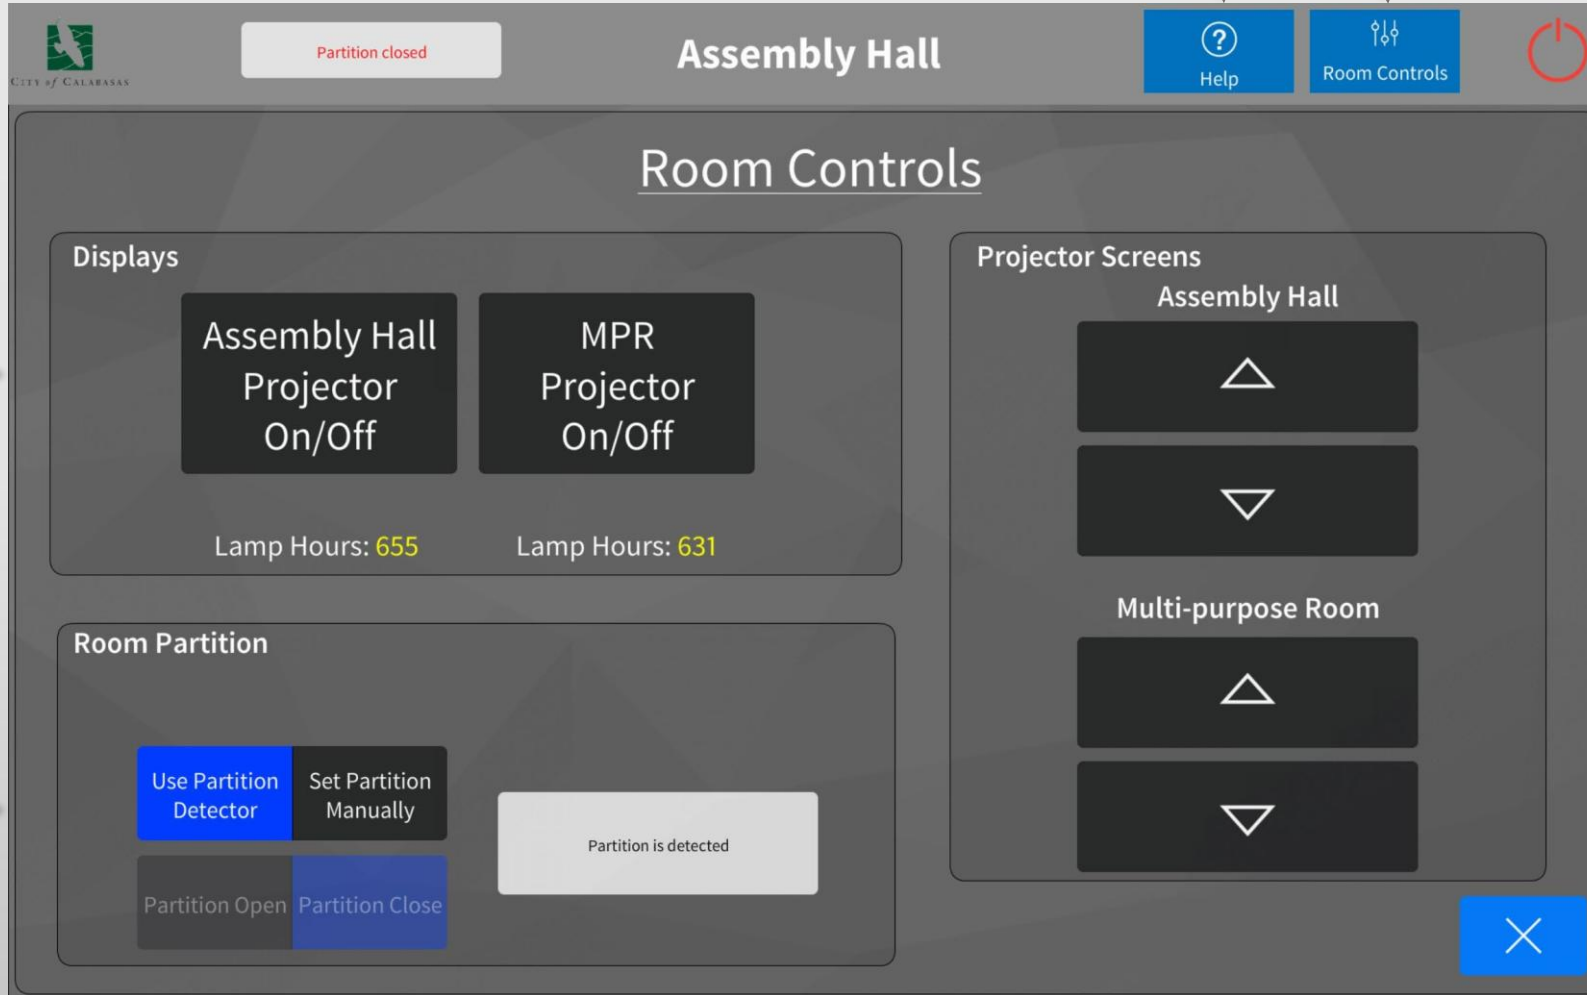

Displays – Will provide projector ON/OFF & lamp hour.

Room Partition Sensor Mode – Will set partition mode on manual or auto.


Screen – Will provide up/down button for projector screen.

Room Control – To control the equipment separately.

SUPPORT



Help – By pressing the Help button you will be diverted to the help screen.

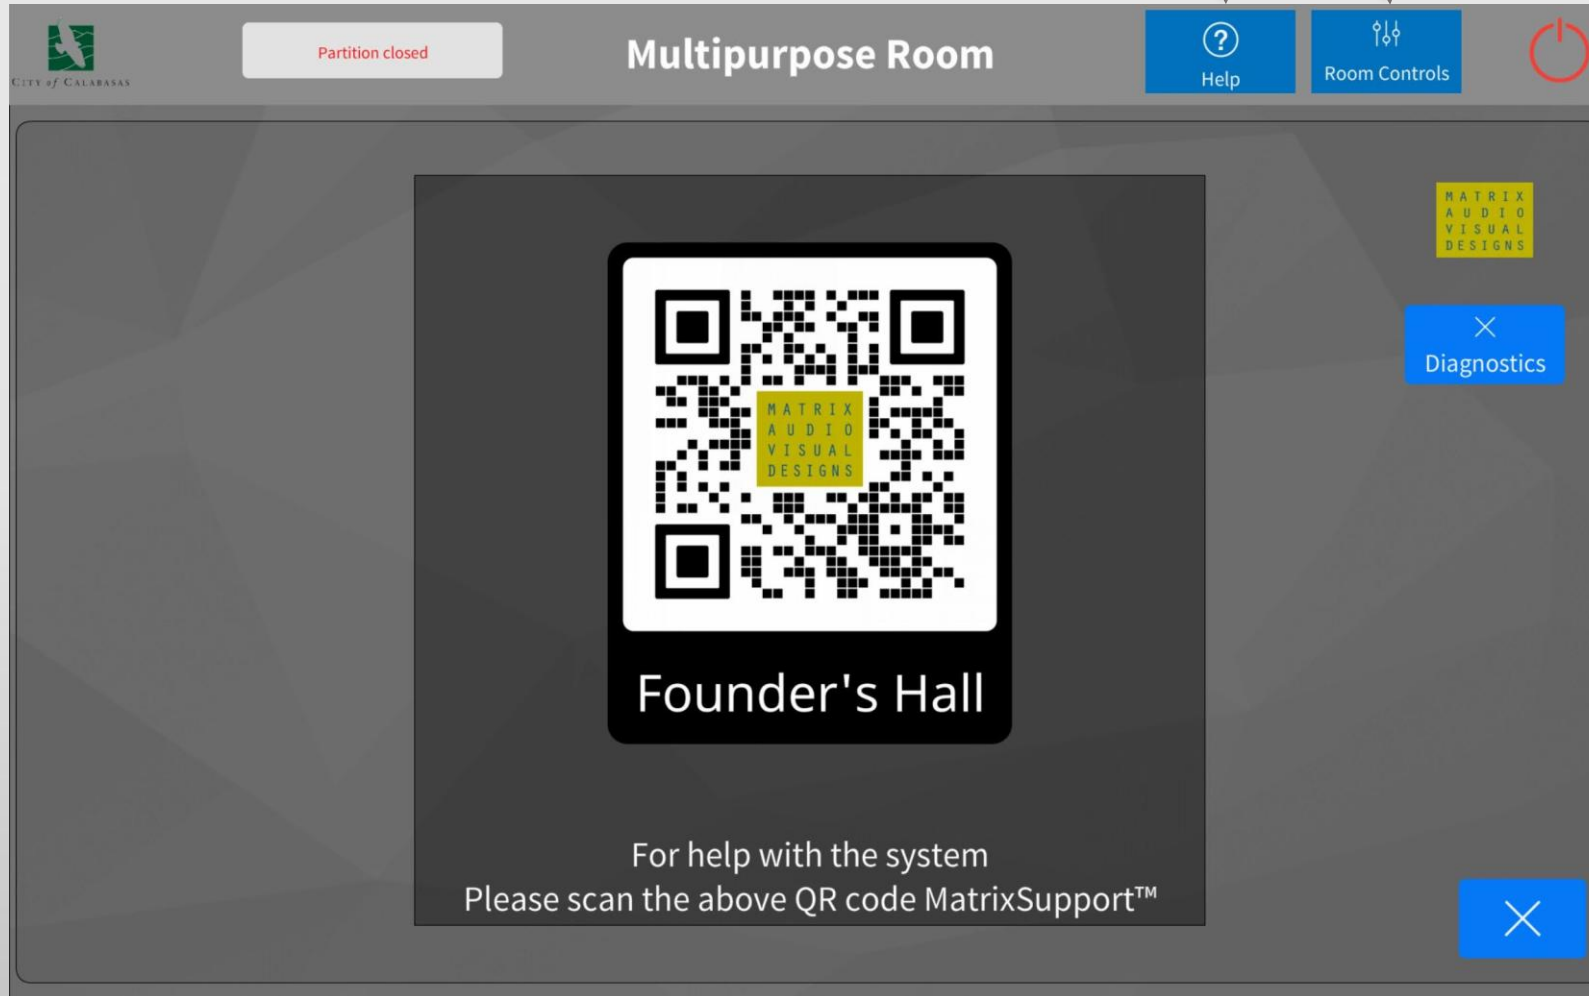

Room Controls – Will provide the room control option.

Diagnostics – Opens the diagnostics page.

QR Code – Scan the QR code to access the user manual and training video.

Close Page – Will close the diagnostic page.

QR CODE – Scan the QR code to download the cheat sheet.

DIAGNOSTIC



Help – By pressing the Help button you will be diverted to the help screen.

ENC-100-01	ENC-100-02	ENC-100-03	ENC-100-04
ENC-100-05	ENC-100-06	ENC-100-07	ENC-100-08
DEC-100-01	DEC-100-02	DEC-100-03	DEC-100-04
DEC-100-05	DEC-100-06	DEC-101-01	DEC-102-01
Extron SMP 352	Extron SMD 202	Shure AP 01	Shure AP 02
Assembly Hall Projector	MPR Projector		

Room Controls – Will provide the room control option.

Status – Displays the status of equipment. Green indicates normal operation. Red indicates the equipment is offline or at fault.

Close Page – Will close the diagnostic page.


Diagnostic – Green indicates the system is functioning correctly. Red indicates the system is offline or experiencing a fault.

SYSTEM OFF



Help – By pressing the Help button you will be diverted to the help screen.

Room Controls – Will provide the room control option.

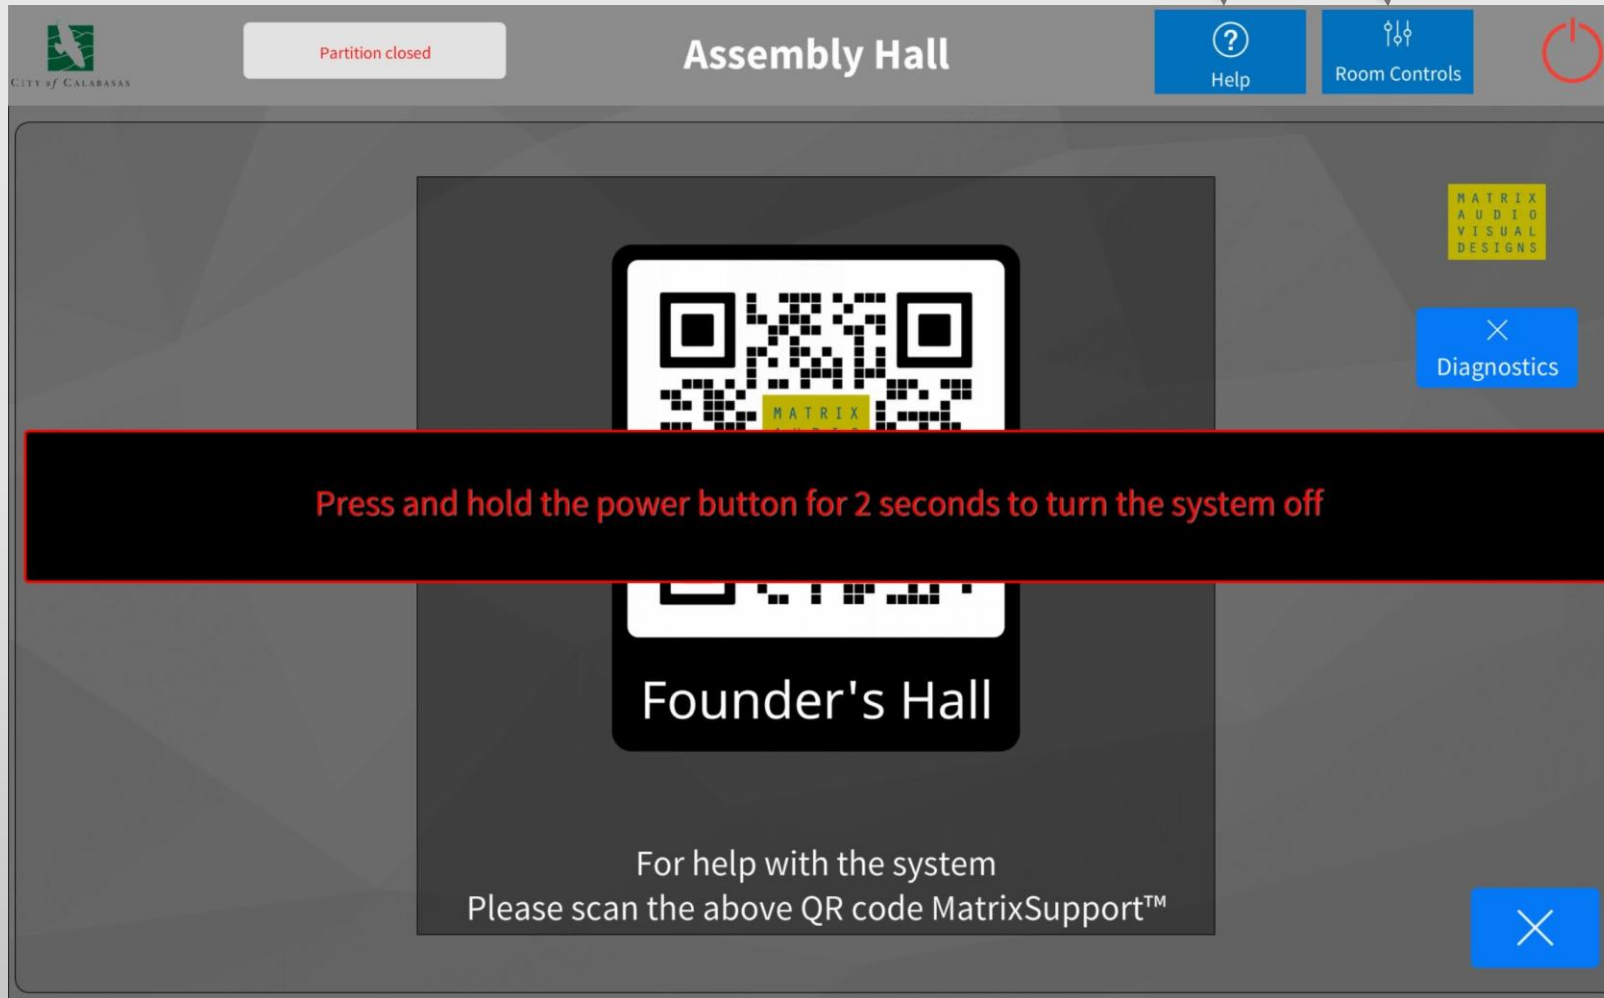

System Off – Press and hold the Off button for 2 seconds to turn off the system.

System Off – After shutdown, the system requires a cool-down period. Please allow sufficient time before powering it back on.